



Release Notes for Noble NB4 Pro+ Base Firmware/ Noble NB4 Pro+ 底座软件版本更新记录

Firmware Version 软件版本	1.0.6	Date 日期	08/2026
--------------------------	-------	------------	---------

- ▶ **新增功能：**
 - 无
- ▶ **修改功能：**
 - 优化底座与游戏手柄的连接逻辑（修复底座连接 G29 方向盘概率性断连问题）。
- ▶ **特殊变化：**
 - 无

注意事项

- 底座固件更新方式：
 - 短按电源键 5 次，LED 指示灯变为绿色慢闪，表示设备已进入更新状态；
 - 将底座通过 USB Type-C 线与电脑连接，在电脑端，打开固件升级工具，接着点击 [Update] 后开始更新。
 - 如需退出固件更新状态，长按电源键约 3 秒即可退出。
- 游戏手柄功能激活方式：
 - 将底座与发射机正确安装，在发射机端依次进入 [系统设置]>[USB 设置]>[USB 功能]，以启用 [游戏手柄] 模式；
 - 将需要识别的手柄或其他外部设备，连接至底座 USB 接口；
 - 长按底座电源键开机，待 LED 灯常亮后，快速短按电源键两次即可激活 [游戏手柄] 功能，系统将自动识别外部设备。

-
- ▶ **New functions:**
 - None
 - ▶ **Modified functions:**
 - Optimized the connection logic between the base and the game controller (fixed the issue where the base would intermittently disconnect from the G29 Driving Force Steering Wheel).
 - ▶ **Special changes:**
 - None

Notes

- Base firmware update method:
 - Short press the power button 5 times. The LED indicator will flash green slowly, indicating that the device has entered update mode.
 - Connect the base to the computer via the USB Type-C cable. On the computer, open the firmware upgrade tool, then click [Update] to start the update.
 - To exit the firmware update mode, long press the power button for approximately 3 seconds.
- HANDLE function activation method:
 - Properly install the base onto the transmitter. On the transmitter, go to [SYSTEM] > [USB Setup] > [USB Function] and enable [HANDLE] mode.
 - Connect the controller or other external device you wish to use to the base's USB port.
 - Long press the base's power button to power it on. After the LED becomes solid on, quickly short press the power button twice to activate the [HANDLE] function. The system will automatically detect the external device.