


## Quick Start Guide 快速操作指南

# FS-ST8



# FLYSKY

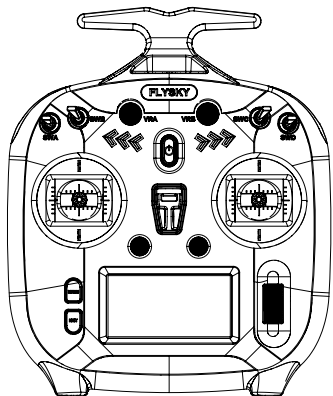

Http://www.flysky-cn.com  
Copyright © 2021 Flysky Technology co., ltd  
Release date: 2021-11-12

## FLYSKY

感谢您购买富斯公司的产品!欲知更多信息,请浏览以下官方网站:www.flyskytech.com. 如果您在使用中遇到任何问题,请先查阅发射机使用说明书。如果问题仍未得到解决,请直接联系当地经销商或者访问官网联系客服人员。

### 注意事项!

开始操作前请务必阅读以下安全信息!

- 请不要在夜晚或雷雨天气使用本产品,恶劣的天气环境有可能导致遥控设备失灵。
- 请不要在能见度有限的情况下使用本产品。
- 请不要在雨雪或有水的地方使用本产品。如果有液体进入到系统内部,可能会导致运行不稳定或设备失灵。
- 信号干扰可能导致设备失控。为保证您和他人的安全,请不要在以下地点使用本产品:



基站附近或其他无线电话跃的地方



人多的地方或道路附近



有客船的水域




高压电线或通信广播天线附近


- 当你感到疲倦、不舒服,或在摄入酒精或服食导致麻醉或兴奋的药物后,不要操作本产品,否则可能对自己或他人造成严重的伤害。
- 2.4GHz 无线电波段完全不同于之前所使用的低频无线电波段。使用时请确保模型产品在您的视线范围内飞行,大的障碍物将会阻断无线电频率信号从而导致遥控失灵模型失控。
- 在使用过程中,严禁紧握发射机天线,否则将会大大减弱无线电传播信号的质量和强度,导致遥控失灵模型失控。
- 在操作或使用模型后,请勿触摸任何可能发热的部位,如发动机、电机、定速设定等。这些部件可能非常热,容易造成严重的烧伤。
- 遥控设备使用不恰当可能导致操作者或他人严重受伤,甚至死亡。为保证您和设备的安全,请仔细阅读使用说明书并按照规定进行操作。
- 使用前必须确保本产品与模型安装正确,否则可能导致模型发生严重损坏。
- 关闭时,请务必先关闭接收机电源,然后关闭发射机。如果关闭发射机电源时接收机仍然在工作,将有可能导致遥控设备失控或者引擎继续工作而引发事故。
- 操控时,请先确认模型所有舵机的动作方向与操控方向一致。如果不一致,请调整好正确的方向。
- 当遥控距离持续较远时,有发生失控的可能。请适当缩短遥控的距离。
- 特此,【Flysky Technology co., ltd】声明无线电设备【FS-ST8】符合 RED2014/53/EU。
- 欧盟 DoC 声明、FCC 声明可在以下互联网地址: www.flysky-cn.com 获取。
- 安装于此发射机的天线必须与人保持至少 20cm 的距离,同时禁止将其用于其他发射机上,用户或者安装人员需要在满足 RF 相关协议的天线安装说明及发射机操作指南的指导下进行操作。

- 注意: 使用类型不正确的电池可能发生爆炸风险,请妥善处理使用完的电池。


### 发射机概览

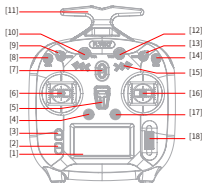


- [1] 显示屏
- [2] EXIT, 退出键
- [3] MENU, 菜单键
- [4] T1/T2, 微调按钮
- [5] 吊环
- [6] 左摇杆
- [7] 电源键
- [8] SWA, 二挡开关
- [9] SWB, 二挡开关
- [10] VRA, 旋钮开关
- [11] 提手
- [12] VRB, 旋钮开关
- [13] SWC, 三挡开关
- [14] SWD, 二挡开关
- [15] 指示灯
- [16] 右摇杆
- [17] T3/T4, 微调按钮
- [18] 滚轮



- [19] 手机支架螺母孔
- [20] 教练接口 (3.5mm 音频接口)
- [21] 预留天线孔位
- [22] Type-C 接口

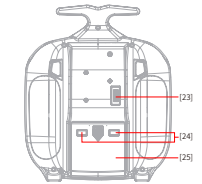

- [23] 高频头接口 (适配 NV14 高频头配件)
- [24] 预留孔位 (XT30 接口出线)
- [25] 电池盖

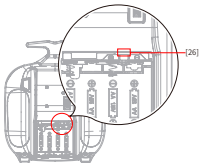

- [26] JST 接口 (2S 锂电池)

### 基本操作

#### AA 电池安装

请按照以下步骤安装 AA 电池:

1. 打开电池仓盖;
2. 将 4 颗电量充足的电池按标注的极性方向装入电池仓内;
3. 盖好电池仓盖。

#### Lipo 锂电池安装

请按照以下步骤安装锂电池:

1. 打开电池仓盖;
2. 将 2S 电量充足的锂电池放入电池仓内;
3. 将电池连接线接入 JST 接口,确保正确连接正负极;
4. 盖好电池仓盖,注意不夹到电池连接线。

注:  
除所述供电方式外,还可以使用 USB-C 线连接发射机的 Type-C 接口供电。  
1. 若连接 Type-C 时,发射机已安装了电池,则优先使用 Type-C 供电;  
2. 推荐使用 AA 电池或 Lipo 电池供电。

#### 开机

请按照以下步骤打开发射机:

1. 检查系统状态,确保电池电量充足且安装正确;
2. 在关机状态下,长按电源键,LED 灯常亮,显示屏显示开机 logo,表示已开机。

注: 如果开机时, SWA/SWB/SWC/SWD 开关未拨到最高位置且油门摇杆没有拨至最低位置,系统会弹出“请将 SWA/SWB/SWC/SWD 调整至最高位置,油门拨至最低位!”的提示,依照提示检查并将开关或摇杆调整到正确位置后方可正常开启发射机。

#### 对码

本发射机和接收机在出厂前已对码成功。若需使用其他的接收机,请按照如下步骤进行对码。本发射机支持双向对码与单向对码,默认双向,双向对码完成后发射机将显示接收机回传的信息,双向对码步骤如下:

1. 打开发射机,按 [MENU] 键进入主界面;
2. 滚动滚轮选择 [接收机设置] 后按一下滚轮进入接收机设置界面,滚动滚轮选择 [对码] 按一下滚轮进入对码设置界面,滚动滚轮选 [开始] 后按一下滚轮,发射机即进入对码状态;
3. 当接收机 LED 灯变为常亮时,表示对码成功;
4. 检查发射机、接收机、模型是否正常工作。如需重新对码,请重复以上步骤。

注:

1. 当对码的发射机是单向模式进入对码状态时,接收机收到对码信息后指示灯慢闪;然后手动将发射机退出对码状态,接收机指示灯变为常亮表示对码成功。
2. 不同的接收机对码方式不同,具体对码方式请访问 FLYSKY 官网查询接收机说明书或其他相关资料。

#### 摇杆校准

出厂默认校准完成,当需要再次校准时,则进入发射机设置 [摇杆校准] 功能,按照界面提示进行相应操作:

1. 进入校准功能,按照提示将摇杆移动到中心位置,滚动滚轮选 [开始] 按一下滚轮进入下一步;
2. 依照提示将摇杆打到最大 / 最小行程,滚动滚轮选 [校准] 按一下滚轮即开始校准。若校

### 自动跳频数字系统 FS-ST8

准成功弹出校准成功的提示界面;若校准失败,滚动滚轮选 [重来] 按一下滚轮即开始重新校准,选 [取消] 则取消摇杆校准。

#### 失控保护

当接收机无法正常收到发射机的信号时,接收机按设置好的失控保护值进行通道输出以保护模型和操作人员的安全。

对于 i-BUS/PPM/PWM 信号,FS-ST8 系统失控保护设置了三项功能项可选: [未设置]、[无输出] 和 [有输出]。

[未设置] 即未设置失控保护;

[无输出] PWM 通道接口为无输出状态;

[有输出] 通道 1-8 分别设置一个失控保护的固定值,默认为读取当前通道的输出值。可将对应的控件拨到需要的位置并保持,按 EXIT 键返回后,设置即保存。

注:

1. 对于 PPM/i-BUS/S.BUS 等总线信号类型不允许单个或其中几个通道为 [无输出] 模式,通道设置为 [无输出] 模式时,实际信号是保持最后输出值;
2. 因 S.BUS 信号信息包含失控标志位,各通道失控保护设置被失控标志位传达给后续设备,若连接的设备支持失控标志位解析,则失控后,输出各通道设置的失控保护值;
3. 对于无失控标志位的信号 PPM/i-BUS,支持设置失控时信号 [无输出] 模式。设置为 [无输出] 模式后,不管各通道失控保护如何设置,失控后各通道均为 [无输出] 模式;
4. 失控保护出厂默认无设置,无设置时失控后的接收机无有效信号输出。

#### 关机

1. 先断开接收机电源;
2. 在开机状态下,长按发射机电源键,直至屏幕熄灭,表示关机。发射机屏幕熄灭后,需等待三秒,方可完全关闭,期间请勿再次开机。

● 关闭发射机之前,请务必先断开接收机电源,然后关闭发射机。如果强行关闭发射机,将会导致遥控设备失控,失控保护设置不合理可能引起事故。

### 规格参数

产品型号	FS-ST8	遥控距离	>450m(空旷无干扰地面距离)
适配接收机	ANT 协议接收机 (如 FS-SR8)	显示方式	128*64 全点阵黑白屏
适配模型	固定翼、直升机、车模、工程车等	在线更新	支持
通道个数	8	温度范围	-10°C ~ +60°C
无线频率	2.4GHz ISM	湿度范围	20% ~ 95%
发射功率	<20dBm	外观颜色	黑色
无线标准	ANT (蚂蚁版自动跳频数字系统)	外形尺寸	176*210.9*82.5mm
通道分辨率	1024 级	机身重量	420g
低电压报警	AA 电池: <4.2V; Lipo 电池: <7.2V	充电接口	无
数据输出	PWM/PPM/i-BUS/S.BUS	认证	CE, FCC ID: N4ZST800
天线类型	内置双天线	操作语言	中文、英文
输入电源	1.5AA*4, 2S Lipo		

FLYSKY

Thank you for purchasing the products of Flysky! To find out more about our products, visit our website at [www.flysky-cn.com](http://www.flysky-cn.com). If you encounter any problems during using, please refer to the manual first. If the problem is still not resolved, contact your local dealer directly or contact the customer service staff via Flysky official website.

Precautions

Read the safety messages listed below before operation!

- Do not use the product at night or during bad weather conditions, like rain or thunderstorms. It can cause erratic operation or loss of control.
- Do not use the product when visibility is limited.
- Do not expose the product to rain or snow. Any exposure to moisture (water or snow) may cause erratic operation or loss of control.
- Interference may cause loss of control. To ensure the safety of you and others, do not operate in the following places:



- Do not use this product when you are tired, uncomfortable, or under the influence of alcohol or drugs. Doing so may cause serious injury to yourself or others.
- The 2.4GHz radio band is limited to line of sight. Always keep your model in sight as a large can block the RF signal and lead to loss of control.
- Never grip the transmitter antenna during operation. It significantly degrades signal quality and strength and may cause loss of control.
- Do not touch any part of the model that may generate heat during operation, or immediately after use. The engine, motor or speed control, may be very hot and can cause serious burns.
- Misuse of this product may lead to serious injury or death. To ensure the safety of you and your equipment, read this manual and follow the instructions carefully.
- Make sure the product is properly installed in your model. Failure to do so may result in serious injury.
- Make sure that the receiver's battery is disconnected before turning off the transmitter. Failure to do so may lead to unintended operation and cause an accident.
- Ensure that all motors operate in the correct direction. If not, adjust the direction first.
- Make sure that the model stays within range in order to prevent loss of control.
- The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.
- Hereby, [Flysky Technology co., ltd] declares that the Radio Equipment [FS-ST8] is in





compliance with RED 2014/53/EU.

- The full text of the EU DoC and Appendix 1 of the FCC Statement are available at the following internet address: [www.flysky-cn.com](http://www.flysky-cn.com)

CAUTION!

- RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Transmitter Overview

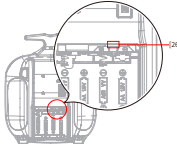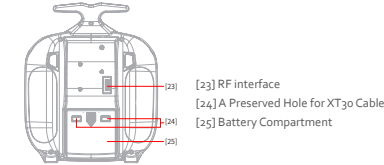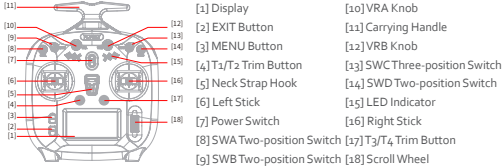

Basic Operations

Install the AA Battery

Follow the steps below to install the AA batteries:

- Open the battery compartment cover as illustrated.
- Insert 4 fully-charged AA batteries into the compartment. Make sure that the batteries are well set according to the polarities marked on the battery compartment.
- Replace battery compartment cover.

Install the Lipo Battery

Follow the steps below to install the lithium batteries:

- Open the battery compartment cover.
- Insert 2S fully-charged lithium batteries into the compartment.
- Plug the cables of lithium batteries into the JST Jack. Make sure to connect correctly according to the polarities marked on the battery compartment.
- Replace battery compartment cover.

Power on

Follow the steps below to turn on the transmitter:

- Check to make sure that the batteries are fully charged and installed correctly.
- Press and hold **Power Switch** until the LED indicator is solid on and FLYSKY logo displays on the LCD screen, indicating that the transmitter has powered on.

*Note: If SWA/SWB/SWC/SWD switches are not at their high positions and the throttle stick is not at its low position when the transmitter is powered on. A pop-up menu will appear to remind you to put these switches and the throttle stick to the proper positions. The transmitter will launch after these switches and the throttle stick are at proper positions.*

Binding

The transmitter and the receiver have been pre-bound before delivery. If you are using another receiver, follow the steps below to bind the transmitter and the receiver. The transmitter supports two-way binding and one-way binding, and two-way binding is the default setting. The transmitter will display the information returned from the receiver after the two-way binding is completed.

- Turn on the transmitter, then press **MENU** to enter the main menu.
- Scroll the **Scroll Wheel** to navigate to the RX SETUP and press the **Scroll Wheel** to enter RX SETUP menu. Then scroll the **Scroll Wheel** to navigate to the **BIND** and press the **Scroll Wheel** to enter. Scroll the **Scroll Wheel** to navigate to the **START** and press the **scroll wheel** to put the transmitter into bind mode.
- Put the receiver into bind mode.
- The binding process is completed when the LED of the receiver stops flashing and is solid on.
- Check to make sure the transmitter and receiver are working correctly, if there are any issues or unexpected operation arise, follow the steps above to bind again.

Notes:

- If the transmitter that has its radio frequency set to "1WAY" enters bind mode, the LED of

Note:

*Additionally, you can connect a USB cable with C interface to the Type-C port to supply power for the transmitter.*

- if the transmitter has installed the AA battery or lithium battery, at the time, when you connect a USB-C cable to the Type-C port, the supply power by Type-C port for the transmitter is preferred.*
- It is recommended to use AA battery or lithium battery to supply power for the transmitter.*

*the receiver will be in slow flashing state. You need to put the transmitter to exit bind mode manually and if the LED of the receiver stops flashing and is solid on, indicating that the binding is completed.*

- The bind mode may vary according to the receiver model. Visit the Flysky official website to check the receiver manual or other relevant information.*

Stick Calibration

To calibrate the maximum/minimum range of the sticks. The transmitter is calibrated before leaving the factory, however if recalibration is required, please follow the steps as below:

- Enter the Stick Calibration interface, push/pull the **Sticks** to their central position according to the prompt. Then scroll the **Scroll Wheel** to navigate to the **START** and press the **Scroll Wheel** to continue.
- Push/pull the **Sticks** to their maximum/minimum endpoint. Then scroll the **Scroll Wheel** to navigate to the **CALIBRATION** and press the **Scroll Wheel** to start. When the calibration is completed successfully, a pop-up interface appears to hint the calibration is successful. If the calibration is failure, scroll the **Scroll Wheel** to navigate to the **REPEAT** and press the **Scroll Wheel** to repeat the steps above. Choose **CANCEL** to exit the interface.

Failsafe

The failsafe function is used to output the channel value according to the out-of-control protection value set by the user after the receiver loses its signal and is out-of-control to protect the model and personnel.

For i-BUS/PPM/PWM. It can be set to [NOT SET], [ON] or [OFF].

[OFF] It is no output for the interface of PWM.

[NOT SET] Failsafe is not set.

[ON] CH1-CH8 are respectively set with a fixed failsafe value. By default, this value is the reading of current channel output value. You can toggle the corresponding control to the desired position and hold it. After pressing **EXIT** to return, the setting is saved.

Notes:

- For bus signal types such as PPM/i-BUS/S.BUS, a single or several of these channels are not allowed to be in [OFF] mode. The actual signal is held at the last output value when the channel is set to [OFF] mode.*
- Because the S.BUS signal information contains failsafe flag bits, the failsafe settings of each channel are communicated to subsequent devices by the failsafe flag bits. If the connected devices support the failsafe flag bit analysis, the failsafe values set for each channel are output after out of control.*
- For the signal PPM/i-BUS without failsafe flag bits, it supports the setting of the signal to [OFF] mode in case of out of control. After setting to [OFF] mode, regardless of the setting of the failsafe of each channel, each channel will be in [OFF] mode after out of control. The failsafe function has no default set at the factory and as such must be set manually.*
- If no failsafe setting has been set, then the receiver will not output anything when signal is lost.*

Power Off

Follow the steps below to turn off the transmitter:

- Turn off the receiver first.
- Press and hold **Power Switch** until the screen turns off, indicating that the transmitter is

Digital Proportional Radio Control System FS-ST8

powered off. After the transmitter is powered off, please wait for 3 seconds before turning it on again.

- Make sure to disconnect the receiver power before turning off the transmitter. Failure to do so can result out of control. Unreasonable setting of the Failsafe may cause accidents.

Specifications

Product Name	FS-ST8
Adaptive Receiver	Receivers with ANT protocol,such as FS-SR8
Adaptive Model	Fixed-wing aircraft, Helicopters, Cars or engineering vehicles, etc.
Channels	8
RF	2.4GHz ISM
Maximum Power	<20dBm (e.i.r.p.) (EU)
2.4GHz system	ANT
Resolution	1024
Low Voltage Alarm	AA battery: <4.2V/ Lipo battery: <7.2V
Data Output	PWM/PPM/i-BUS/S.BUS
Antenna	Built-in two antennas
Battery	1.5AA*4/2S Lipo(JST)
Distance	>450m (Ground distance without interference)
Display	128*64 LCD (Black and white dot matrix screen)
Online Update	Yes
Temperature Range	-10°C ~ +60°C
Humidity Range	20% ~ 95%
Color	Black
Dimension	176*210.9*82.5mm
Weight	420g
Charging Jack	NO
Certifications	CE, FCC ID: N4ZST800
Langages	Chinese, English

ManufacturerFLYSKY Technology Co., Ltd

Address: 16F, Huaifeng Building, 6006 Shennan Road, Futian District, Shenzhen

本说明书中的图片和插图仅供参考，可能与实际产品外观有所不同。产品设计和规格可能会有所更改，恕不另行通知。

Figures and illustrations in this manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.